

Roland: Advanced Options

Note: Roland Recorders are available for use at the [IT Help Desk](#). You can view the [owners manual](#).

Playing Back a Recording

1. Press the *Finder* button
2. Use the *Play* and *Stop* buttons to navigate to your recording
3. Use the *Record* button to select the recording
4. Use the record button to choose *Select*
5. Press *Play*

Rename a Recording

1. Press the *Finder* button
2. Use the *Play* and *Stop* buttons to navigate to your recording
3. Use the *Record* button to select the recording
4. Use the *Play* and *Stop* buttons to scroll down to option 4, *Rename*
5. Use the record button to choose *Rename*
6. Use the left and right arrows to move between letters, and the *Play* and *Stop* buttons to change letters
7. Press *Record* to save the new name

Delete a Recording

1. Press the *Finder* button
2. Use the *Play* and *Stop* buttons to navigate to your recording
3. Use the *Record* button to select the recording
4. Use the *Play* and *Stop* buttons to scroll down to option 3, *Delete*
5. Press *Record* to select *Delete*, then press *Record* again to delete the file

Convert WAV Recording into MP3

1. Press the *Finder* button
2. Use the *Play* and *Stop* buttons to navigate to your recording
3. Use the *Record* button to select the recording
4. Use the *Play* and *Stop* buttons to scroll down to option 10, *MP3 Recording*
5. Press *Record* to select *MP3 Recording*, then press *Record* again to begin the conversion
6. The device will create an MP3 copy-- you will be taken back to the *Finder* screen when the conversion is finished